



It's relatively easy to put our harness on your dog, in fact, that's pretty much the whole point of it. It does have several adjustments however, which allow you to customize it's fit for your dogs unique dimensions. First, pull the harness out of the mesh carrying bag. The front half of the harness will be attached to the Rear half by the connector strap [leave it connected]. Make sure you have all the parts shown in figure 1.

1.

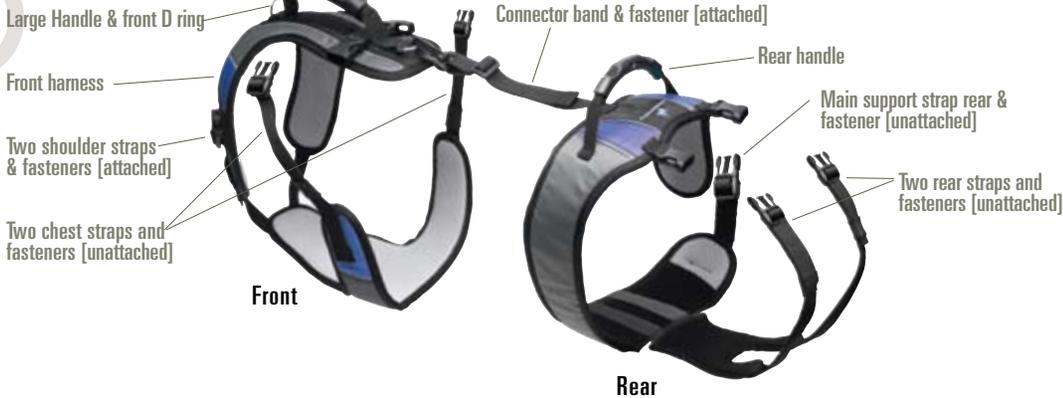

2.

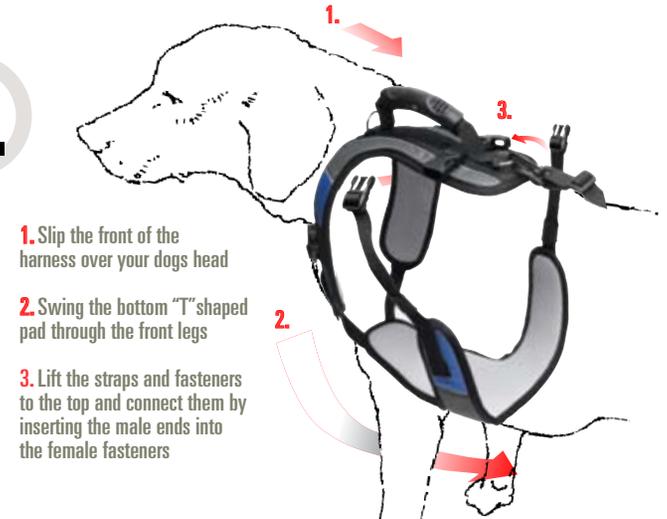

1. Slip the front of the harness over your dogs head
2. Swing the bottom "T" shaped pad through the front legs
3. Lift the straps and fasteners to the top and connect them by inserting the male ends into the female fasteners

3.


1. Now, place the main strap over your dogs hips and center the handle at the middle of your dogs back just forward of the hip and legs.

2. Let the main support strap drop down and below to the left of your dogs hips and in front of the legs, curl the main pad underneath and wrap to the opposite side.

3. Lift the main strap up to the opposite fastener and connect it. Tighten it only after all other straps have been connected.

4. Now fasten the two rear support straps by lifting them up around either side of the tail and connect to the fasteners at the top.

5. All rear straps can be centered at the bottom after the main strap has been adjusted for your dogs dimensions. Unfasten, adjust, refasten.

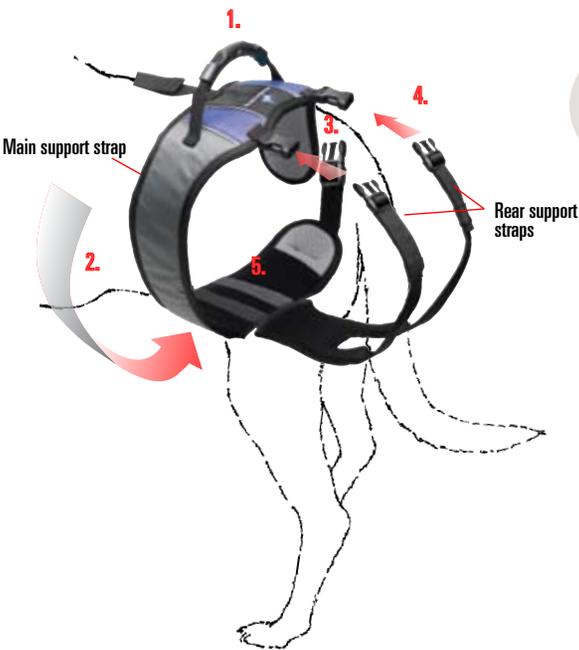

4.



On your pup your harness should look something like this.

General Notes

1. The front two main straps will loosen with use. This was deliberate. As your dog lies in the harness it will soften and become more comfortable for them. Tighten straps after lifting.
2. The straps do not have to be tight to be effective. Main lifting comes from the pads underneath. You will see gaps as you lift them and that's OK.
3. The bottom pads add cushioning for your dog as they lie on them - it's like having portable pads.

Every dog is unique, so we designed a number of adjustments into our harness. We feel confident that between the two sizes you're going to be able to provide the perfect fit for your dog. Although we rely primarily on weight as the basis to determine the size of harness you need, here are the basics of dimensions of both sizes to further assist you in selection.

1. The 3 primary dimensions in fitting

1. Neck Circumference
2. Chest Circumference
3. Waist Circumference



2.

The Harness	Size	Neck Circumference	Chest Circumference	Waist Circumference	Weight Range	Length*
Active Dog	Medium to Large	24" to 14"	40" to 18"	32" to 20"	60 to 90 Lbs.	4 to 15"
Active Dog	Large to Extra Large	28" to 16"	48" to 22"	36" to 28"	90 to 130 Lbs.	4 to 15"
Total Support	Medium to Large	24" to 14"	40" to 18"	32" to 20"	60 to 90 Lbs.	4 to 15"
Total Support	Large to Extra Large	28" to 16"	48" to 22"	36" to 28"	90 to 130 Lbs.	4 to 15"

*Length above refers only to the central connector strap. Total overall length varies between 40" to 27" . The front and back sections are roughly 12" long depending on the extension of the front and back connector straps.